

# TUFLOC

## INSTALLATION INSTRUCTIONS

### Sport Utility Vehicles TufBox



---

### Warranty

Thank you for purchasing the TufBox manufactured by TUFLOC. We have worked hard to develop the best storage box on the market and warrant this product for one year from date of purchase against defects in materials and workmanship. This warranty is limited to replacement or repair of the product only. No other warranties are expressed or implied. Please contact the factory for warranty claims before returning any product.

## Secure TufBox to Vehicle

- It may be necessary to remove contents that are stored in or around the mounting footprint of the TufBox as these components may not be accessible after installation.
- Make sure the TufBox fits properly between the wheel wells of the vehicle.
- It may be helpful to have two people during the installation of the TufBox.


## Remove Drawer from Cabinet

There are two styles of slides. See detail and descriptions below:

**Retaining Tab Style:** Fully extend the drawer and remove the Slide Securing Screw located on each side of the drawer. Next, while pressing in on the Silver Retaining Tabs located on the sides of the drawer, lift up on the front of the drawer removing it from the tabs and pull it away from the cabinet.


**Trigger Release Style:** Fully extend the drawer until the Red Trigger Release Tab is exposed on each side of the drawer. Next push DOWN on the right-side Trigger Release Tab and push UP on the left-side Trigger Release Tab. Once the Tabs are released from each side, pull the drawer away from cabinet.

### Retaining Tab Style

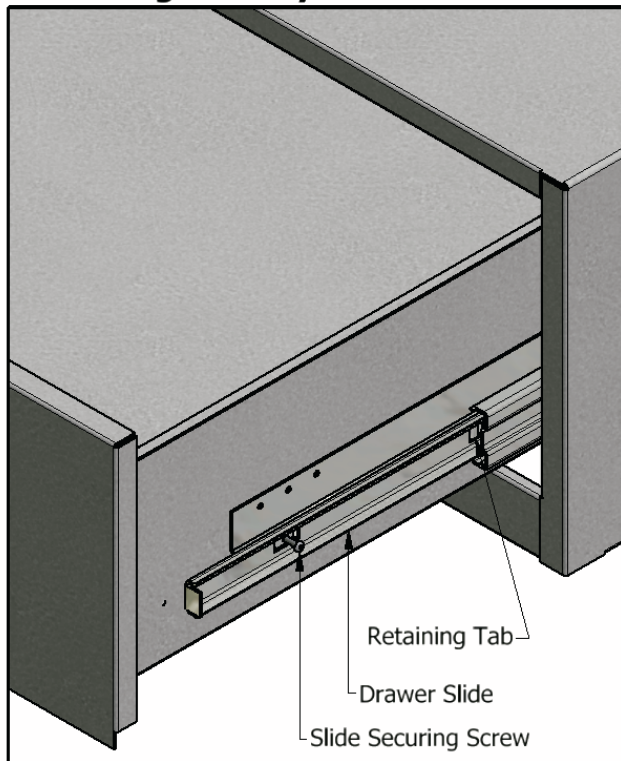

Detail A


### Trigger Release Style

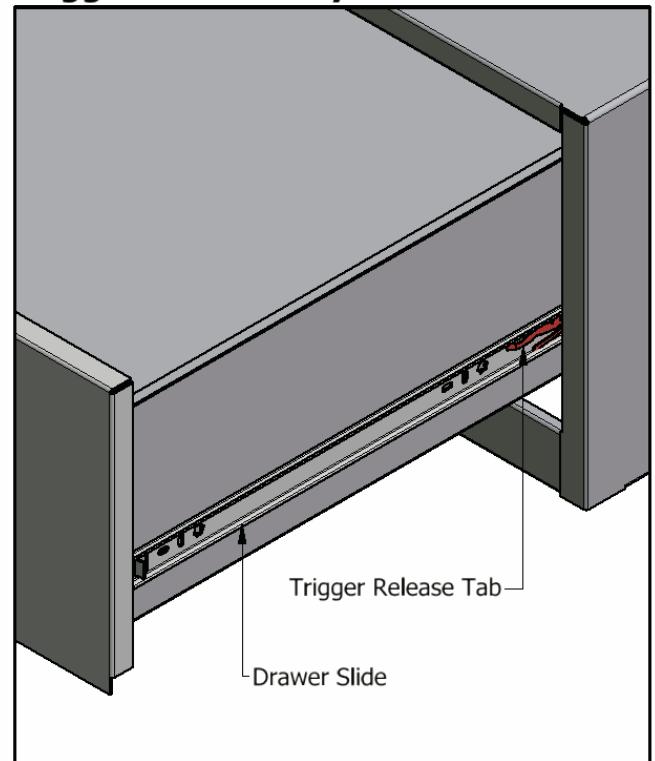


## Secure the TufBox to Vehicle

- Place the Cabinet in the vehicle, and determine the best mounting location. Make sure the rear door of the vehicle will close properly.
- Based on the TufBox model that is being installed, use the mounting bolt pattern shown on pages four and five. To avoid damage to carpeted interior, place masking tape on the carpet under the holes and use a pen to mark the masking tape. If the pre-drilled holes conflict with the vehicle's gas tank, electrical wiring, hoses, etc, the front and rear rail supports can be re-drilled to suit.
- It is not recommended that you drill through the carpet as the drill bit may snag and tear the carpet. You may wish to center punch the locations (through the carpet) then lift the carpet for drilling. Once the hole locations are selected, drill 13/32" holes.
- With the holes drilled, place the cabinet back into vehicle and align frame holes with holes in floor.
- Use the hardware kit as provided to secure the drawer cabinet to the vehicle. Note: Due to different makes/models of vehicles different fasteners may be necessary.


### Hardware (Supplied)

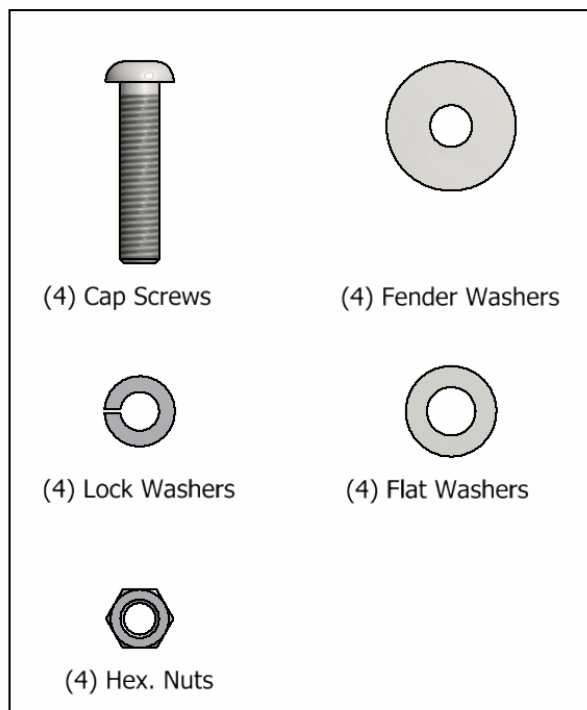


### Mounting Bolt Assembly

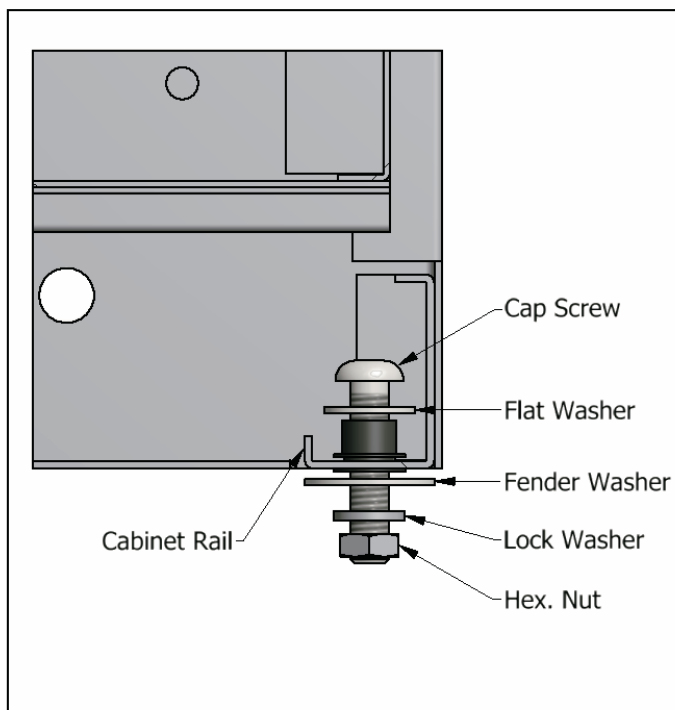


## Bolt Pattern (P/N 36-009)

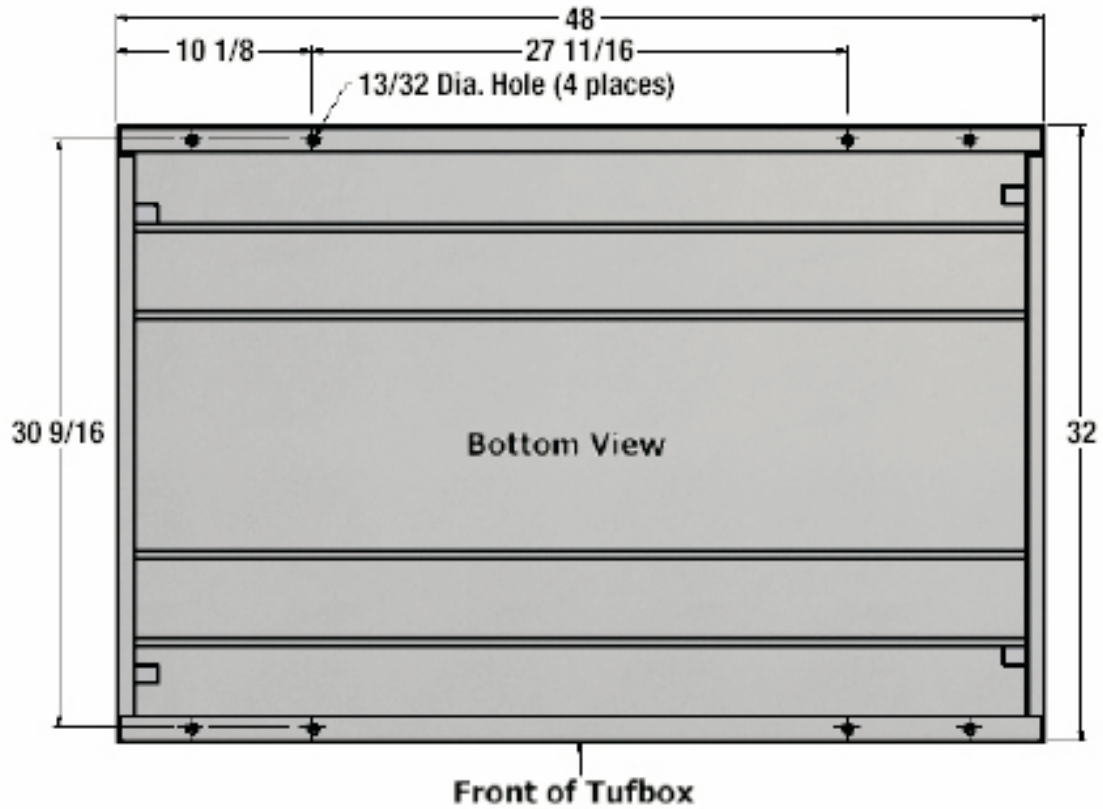


## Bolt Pattern (P/N 36-010)

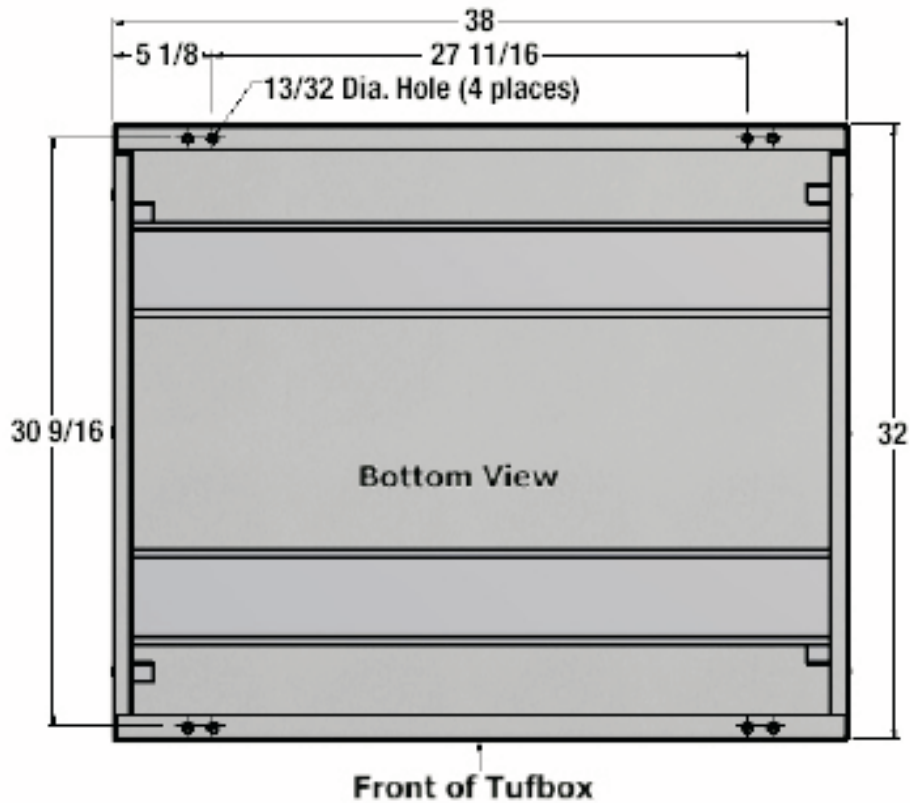

## Bolt Pattern (P/N 36-018)

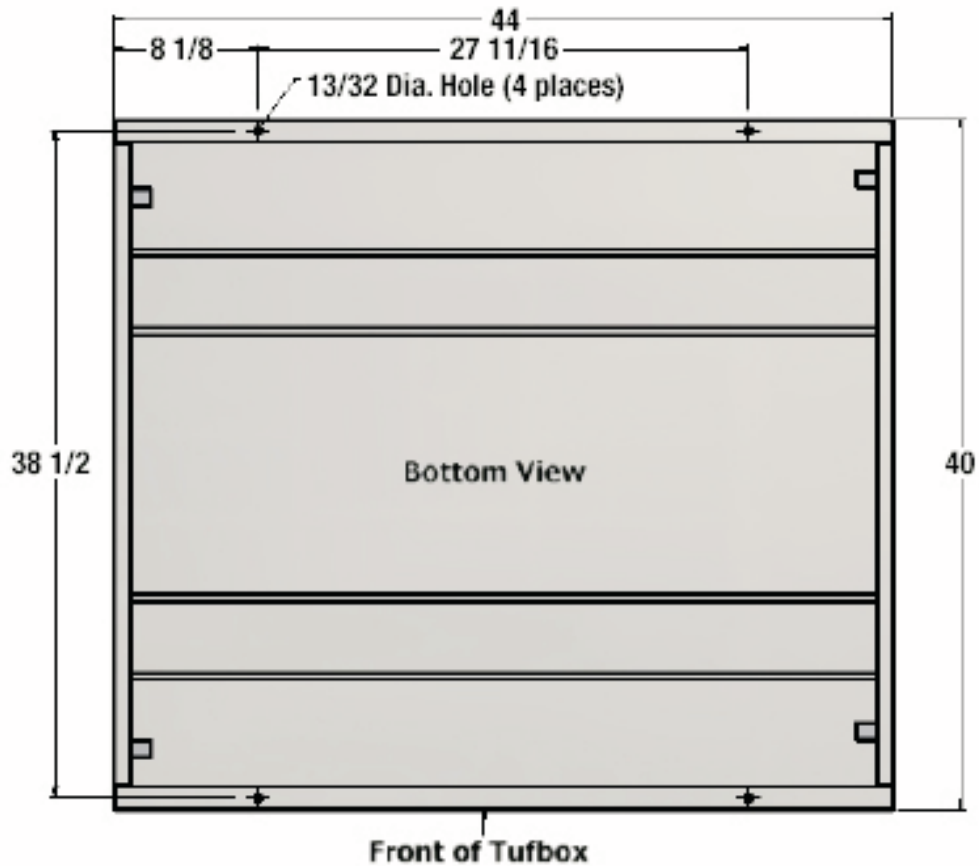

## Bolt Pattern (P/N 36-019)

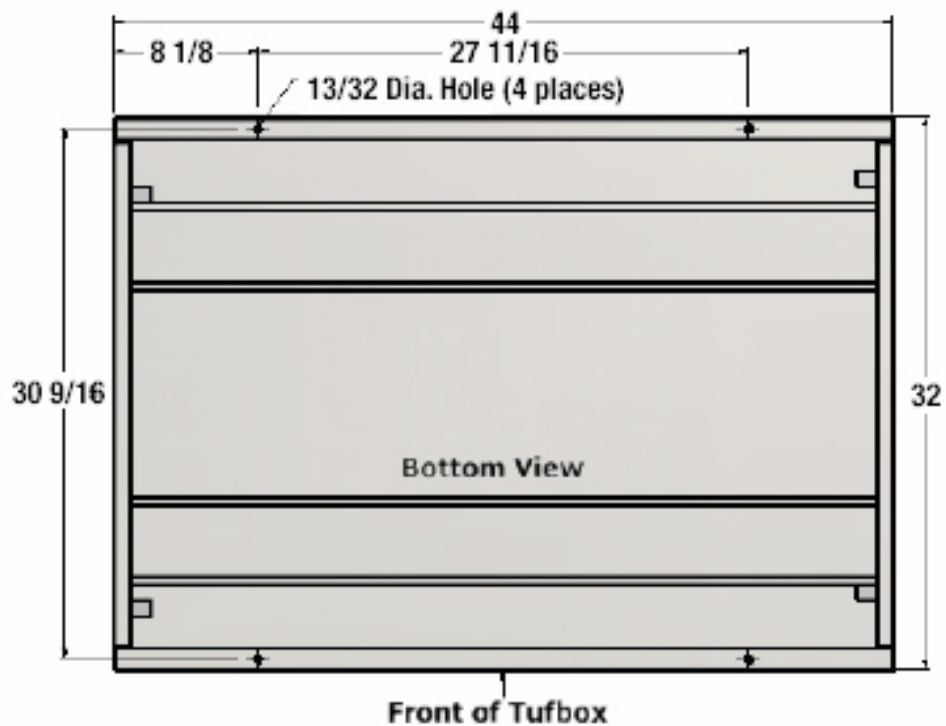

## Place Drawer Into Cabinet (See Detail A on Page 2)

**Retaining Tab Style:** Fully extend the cabinet drawer slides and set the cutouts on the drawer rail into the Retaining Tabs. Make sure drawer functions properly. Install the Slide Securing Screws on each side of the drawer.

**Trigger Release Style:** Push cabinet slides into the cabinet, making sure the ball bearing casing on each side is pulled all the way back towards the installer. Align the drawer and cabinet slides and push the drawer into the cabinet until the slides click into place and the bearings are fully engaged.


## Maintenance

- These drawers are intended to hold a maximum weight of 200 lbs. Do not exceed the drawer weight limit. Exceeding the weight limit can make the drawer difficult to operate and can shorten the life of the bearings in the drawer slides.
- The TufBox is designed to provide years of reliable service with minimal maintenance. Occasionally, coat the key with a light petroleum-based lubricant such as WD-40 and insert the key into the lock & turn a few times to lubricate the lock cylinder. NEVER use a graphite based oil. The drawer slides should also be lubricated periodically to assure longer life.

## Lock Configurations

- Standard T-Handle: An adjustable cam can be adjusted to keep the drawer tight and eliminate rattle. (See diagrams below)
- Combination Lock: Please refer to enclosed instruction booklet.

T-Handle with Keyed Lock

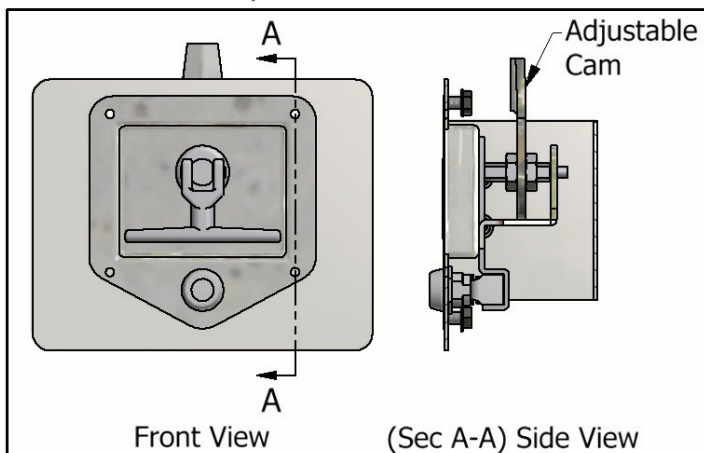

Combination with Key Override Lock

